






FLARE

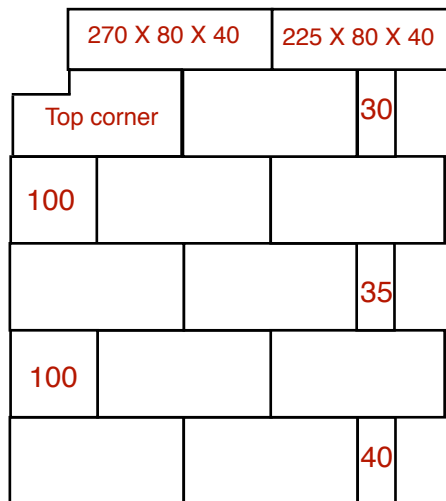


LEFT WALL

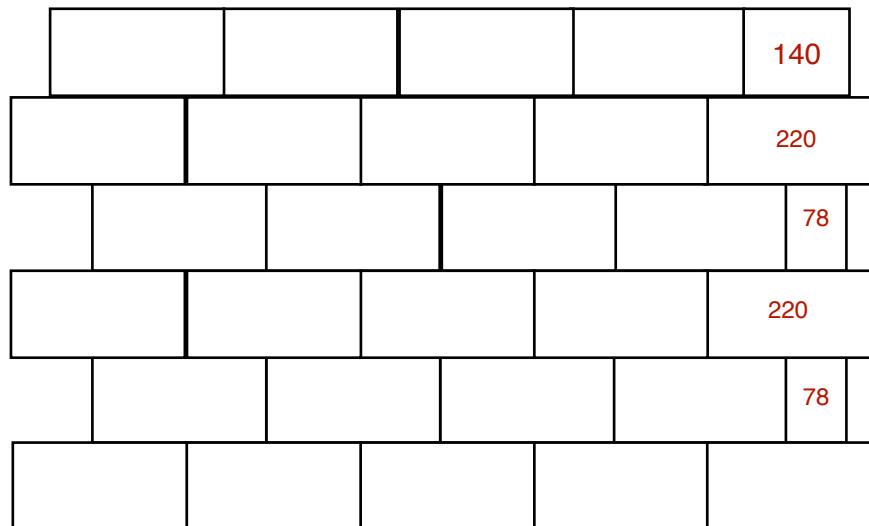


BACK WALL

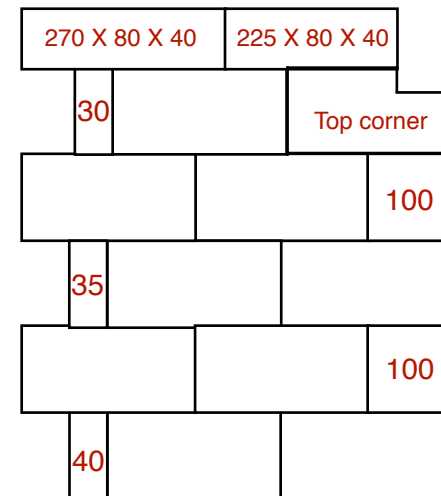

RIGHT WALL

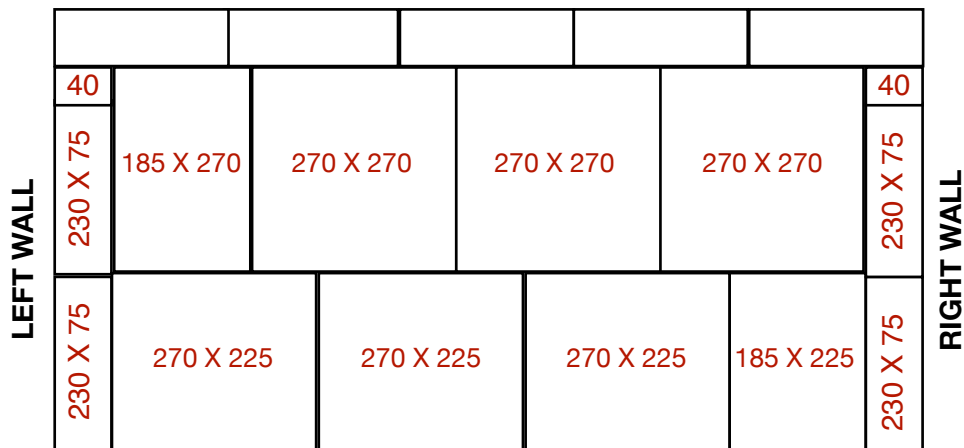

BOTTOM LAYER -BASE PLAN

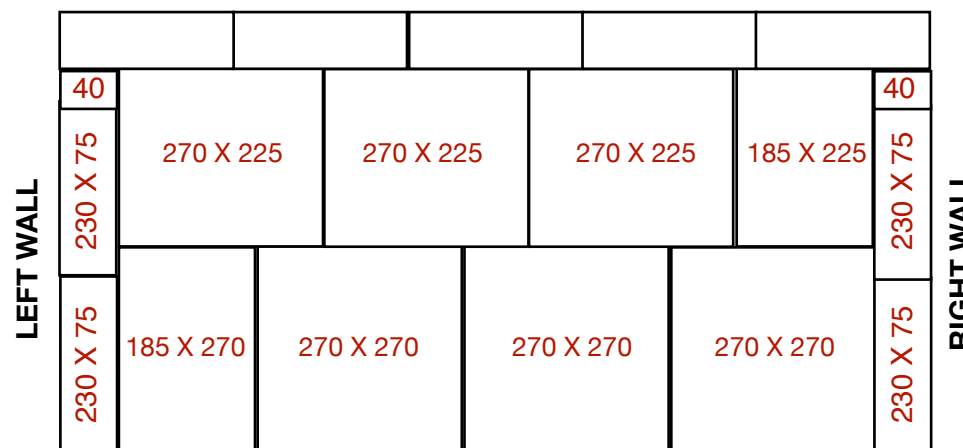

TOP LAYER -BASE PLAN

BRICK INSTALLATION MANUAL



FLARE

Step 1

Get the tools you will need

1. A rubber mallet
2. A tape measure (to check dimensions if needed)

Step 2

Set aside base layer bricks

- 9 bricks - 230 X 75
- 2 bricks - 40 X 75
- 6 pavers - 270 X 270
- 6 pavers - 270 X 225
- 2 pavers - 185 X 270
- 2 pavers - 185 X 225
- 1 X Stainless Steel Ash Guard

Install the base layer and ash guard

1. Place the back layer of 230mm bricks
2. Place the bricks on each side of the fire
3. Place the bottom layer of pavers
4. Place the top layer of pavers
5. Make sure front edge of pavers & bricks align
6. Insert the ash guard, tap with mallet as needed to fit under the pavers

Step 3

Check for the remaining bricks

- 34 bricks - 230 X 75
- 2 bricks - 220 X 75 (labelled 220)
- 4 bricks - 100 X 75 (labelled 100)
- 2 bricks - 35 X 75 (labelled 35)
- 2 bricks - 30 X 75 (labelled 30)
- 2 bricks - 78 X 75 (labelled as 78)
- 2 pavers - 270 X 80 X 40
- 2 pavers - 225 X 80 X 40
- 2 top corner bricks (cut on angle)
- 1 brick - 140 X 75 (labelled as 140)

Install the remaining side layers

1. Build one layer at a time
2. Tap tight bricks with a mallet
3. If any gaps, space so not visible
4. No sealer or glue to be used to fix bricks into place